

## Console /Sensor Wire

**Symptom:** Air Bike console turns on and counts time, but does not count other metrics such as calories, distance, watts, etc.

*In order for Air Bike console to function properly, it has 4 main components:*

1. Console
2. Sensor Wire
3. Sensor
4. Magnet on Clear Pan attached to the fan

To troubleshoot where the issue may lie, we recommend:

1. Reset the console by removing and replacing the batteries
2. Make sure the sensor tip at end of sensor wire is pointed close enough to the black magnet glued onto the clear plastic fan that is attached to the fan wheel at front, right portion of bike



3. Disconnecting and reconnect sensor wire to your console by unscrewing console from console stem
4. Replace sensor wire: <https://www.youtube.com/watch?v=97ajM0Yj1ns>