

# Assault Rack

**IMPORTANT!**

Read this before using the Assault Rack

---

## Assault Rack Instructions & Guidelines

---

### Before assembling the Assault Rack

- » Iron Edge will not be held responsible for any injury or death that occurs while installing or using this product.
- » Each Assault Rack is laser-cut from steel. Be aware that internal edges can be sharp or abrasive and should be treated with caution while assembling.
- » Check the product for any manufacturing defects prior to installation and use. If defects are evident, do not construct or use the product and contact Iron Edge immediately.
- » Follow installation manual for correct installation procedures.

### Product care

- » Store the Assault Rack in a dry environment (unless electroplated for outdoor use).
- » Frequently check that all bolts and fasteners are secure
- » If the powder coat is chipped, use touch-up paint to prevent any corrosion of the exposed raw steel.
- » See each individual product guideline sheet for information on j-cups, spotting arms and utility pegs.

### Lifetime Product Warranty

- » **The Assault Rack is covered by a lifetime warranty for manufacturers' defects and faults.**
- » **Iron Edge will exchange/replace/refund to the customer's satisfaction all Assault Racks affected by manufacturers defects.**
- » **This warranty does not include normal wear and tear including scratches and chips to the powder coat.**

### Iron Edge No BS Policy.

We take our products and services seriously. It's for this reason we offer a hassle-free No BS policy with all our products. If there's ever an issue with our service or product that is outside of normal wear and tear (see our Terms & Conditions), simply let us know and we'll take care of it with a No BS attitude.

**ironedge.com // 1300 85 40 50**

**IRONEDGE**

**SERIOUS TRAINING**